


# SATATYA Project Bullet IP-Camera

The Persistent Vision

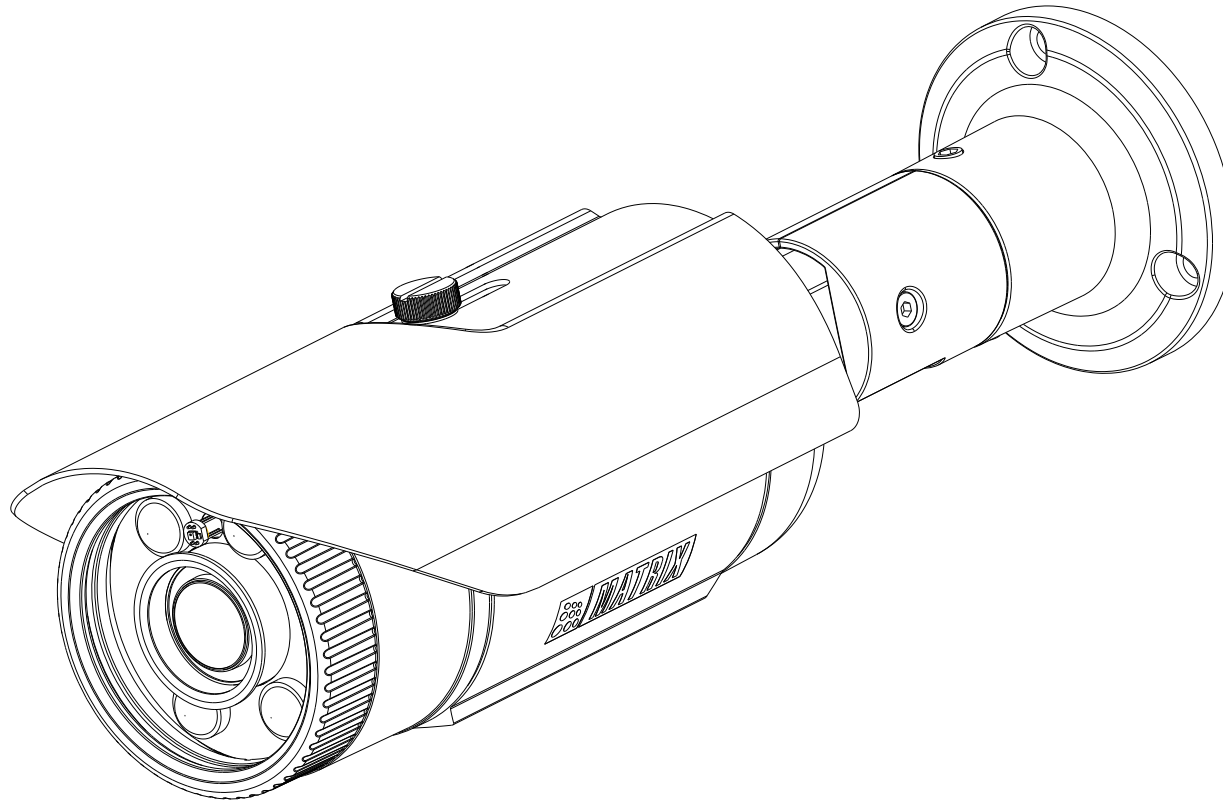

## Safety Instructions

These instructions are intended to ensure that the user can use the product correctly to avoid danger or property loss.

### Cautions

- Ensure that the power supply voltage is correct before using the camera.
- Avoid placing cables too close to magnetic or high voltage devices, to reduce undesirable image noise.
- Do not touch sensor modules with fingers. For cleaning use 'clean cloth' and wipe it gently.
- Do not mount the camera with the lens facing the sun or bright light to prevent damage to the sensor.
- Do not expose the camera to temperatures below or beyond its operating temperature.
- Do not mount the camera near a radiator or a heater.

### Warning

- In the use of the product, you must be in strict compliance with the electrical safety regulations of the region and nation.
- Do not connect several devices to one power adapter as it may cause over-heating or fire hazard.
- If smoke, odour or noise rise from the device, turn off the power at once and unplug the power cable, and contact the nearest service center.
- To prevent electrical shock, turn off power supply before making electrical connections.

## Consignes de sécurité

Ces instructions ont pour but de garantir que l'utilisateur peut Utiliser le produit correctement pour éviter tout danger ou perte de propriété.

### Précautions

- Vérifiez que la tension d'alimentation est correcte avant d'utiliser l'appareil photo.
- Évitez de placer des câbles trop près d'une tension magnétique ou élevée périphériques, pour réduire le bruit d'image indésirable.
- Ne touchez pas les modules de capteur avec les doigts. Pour le nettoyage, utilisez nettoyer chiffon et essuyez-le doucement.
- Ne montez pas l'appareil photo avec l'objectif dirigé vers le soleil ou vers lumière pour éviter d'endommager le capteur.
- N'exposez pas l'appareil photo à des températures inférieures ou supérieures à ses température de fonctionnement.
- Ne montez pas la caméra à proximité d'un radiateur ou d'un appareil de chauffage.

### Attention

- Dans l'utilisation du produit, vous devez être en stricte conformité avec les réglementations de sécurité électrique de la région et de la nation.
- Ne connectez pas plusieurs périphériques à un seul adaptateur secteur, provoquer une surchauffe ou un risque d'incendie.
- Si de la fumée, des odeurs ou du bruit émanent de l'appareil, éteignez-le une fois, débranchez le câble d'alimentation et contactez le service d'assistance le plus proche centre.
- Pour éviter un choc électrique, éteignez l'alimentation avant de connections electriques.

# Contents

|   |    |
|---|----|
| Know your Camera                              | 4  |
| What Your Package Contains                    | 5  |
| Things You Will Need                          | 5  |
| Camera Variants                               | 5  |
| Installation                                  | 8  |
| Ingress Protection Accessory Installation     | 9  |
| Installing Mounting Template                  | 12 |
| Mounting the Camera                           | 13 |
| Adjusting the Camera Angle                    | 13 |
| Connecting cables                             | 15 |
| Accessing Reset Pin and SD card slot          | 17 |
| Adjusting Focus and Zoom in Varifocal Cameras | 20 |
| Network Configuration                         | 21 |
| Accessing via Web Browser                     | 22 |
| Technical Specification                       | 26 |

Please read this guide first for correct installation and retain it for future reference. The information in this guide is prevailing at the time of publication. However, Matrix Comsec reserves the right to make changes in product design and specifications without prior notice.

## Copyright

All rights reserved. No part of this document may be copied or reproduced in any form or by any means without the prior written consent of Matrix Comsec.

## Warranty

Limited Warranty. Valid only if primary protection is provided, mains supply is within limit and protected, and environment conditions maintained within product specifications. Complete warranty statement is available on our website:

[www.matrixvideosurveillance.com](http://www.matrixvideosurveillance.com)

## Know your Camera

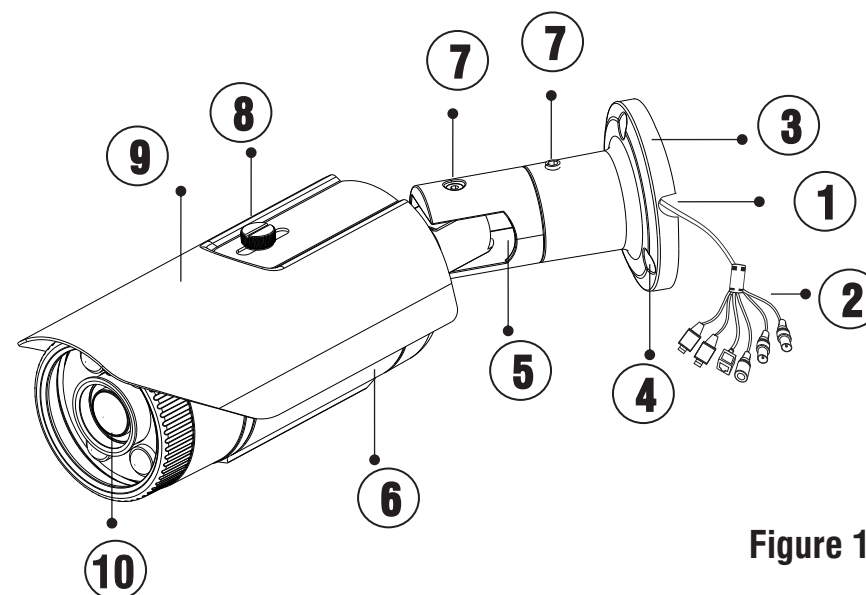


Figure 1

- |                      |                                      |
|----------------------|--------------------------------------|
| 1. Cable Guide       | 6. Camera Body                       |
| 2. Cable Assembly    | 7. Screws for adjusting camera angle |
| 3. Base Plate        | 8. Sunshield bolt                    |
| 4. Hole for mounting | 9. Sunshield                         |
| 5. Pivot Joint       | 10. Lens                             |

The **Standard** variant consists of 2 connectors: Power connector and Ethernet connector (POE).

The **Premium** variant consist of 6 connectors: Power connector, Ethernet connector (POE), Audio IN, Audio OUT, Alarm IN and Alarm OUT.

## What your Package contains

- Bullet IP Camera unit
- Wall mounting Template
- Wall mounting Screws with screw grip (4 nos.)
- Allen Key
- Cable Accessories for weather proofing
- Ingress Protection Accessories (4 parts)

## Things You will Need

- A power drill, screwdriver set, pliers, wire-cutter, a ladder.
- Necessary Cabling
- A power supply with the recommended output voltage of 12V DC. Use an adapter to connect the camera to the power outlet.

## Camera Variants

The Bullet Cameras are available in following variants:

1. **Standard** Variant used for General Surveillance in Discipline/Safety Precaution.
2. **Premium** Variant used for Objective Surveillance in Entry/Exit monitoring, Periphery monitoring, Productivity monitoring, Unethical practices monitoring.



You can capture near and broader view with lens of 2.8mm and 3.6 mm focal length. For example it can be used in ATM and Elevators.

With lens of 6 mm focal length, far and narrow view can be captured. For example it can be used in corridors or long passage to capture long view.

**Standard** and **Premium** variants are available in 2MP as well as 3MP. The respective available variants are listed in below table,

## 2MP Camera Variants

| Type of Lens        | Focal Length | Standard      | Premium        |
|---------------------|--------------|---------------|----------------|
| Fixed               | 2.8mm        | CIBR20FL28CWS | CIBR20FL28CWP  |
| Fixed               | 3.6mm        | CIBR20FL36CWS | CIBR20FL36CWP  |
| Fixed               | 6.0mm        | CIBR20FL60CWS | CIBR20FL60CWP  |
| Manual Varifocal    | 2.8-12 mm    | CIBR20VL12CWS | NA             |
| Motorized Varifocal | 2.8-12 mm    | NA            | CIBR20MVL12CWP |

## 3MP Camera Variants

| Type of Lens        | Focal Length | Standard      | Premium        |
|---------------------|--------------|---------------|----------------|
| Fixed               | 2.8mm        | CIBR30FL28CWS | CIBR30FL28CWP  |
| Fixed               | 3.6mm        | CIBR30FL36CWS | CIBR30FL36CWP  |
| Fixed               | 6.0mm        | CIBR30FL60CWS | CIBR30FL60CWP  |
| Manual Varifocal    | 2.8-12 mm    | CIBR30VL12CWS | NA             |
| Motorized Varifocal | 2.8-12 mm    | NA            | CIBR30MVL12CWP |

## Installation Instruction

1. This product is intended to be supplied by a UL listed power supply unit marked “Class 2” or “LPS” or “PS2” and rated 12VDC, 2A min.
2. The wired LAN hub providing Power over the Ethernet (PoE) in accordance with IEEE 802-3af shall be a UL listed device with the output evaluated as a limited power source as defined in UL60950-1 or Ps2 as defined in UL62368-1.

## Installation

### Before you start

Please make sure,

- The device in the package is in good condition and all the assembly parts are included.
- All the related equipments are powered-off before installation.
- The wall or ceiling is strong enough to support the weight of camera.

### Step 1: Select a Location

Select a suitable location for your camera to enable coverage of the intended surveillance area. The location should preferably be a flat surface, such as a wall or a ceiling.

You can install the camera where cables are running through the interior of the wall or ceiling as shown in **Figure 2**. Else cabling has to be done through POE.

### Step 2: Prepare for Installation

Ensure that the necessary cabling to connect the camera to LAN port and Power outlet are in place. The connecting cables from the monitoring site should be ready at the installation site.

You can insert SD card in camera to store recordings during network failover and to upload image or clip as a result of event trigger.


See page **17** to know how to open the camera and insert the SD card.

### Step 3: Ingress Protection Accessory Installation


1. The Ingress Protection Accessory comprises of the following: Holder, Rubber, Cap and O-Ring.

You need to pass the RJ45 cable with connector through each in the sequence as shown below.


Now, insert the Rubber into the Holder and then place the Cap.

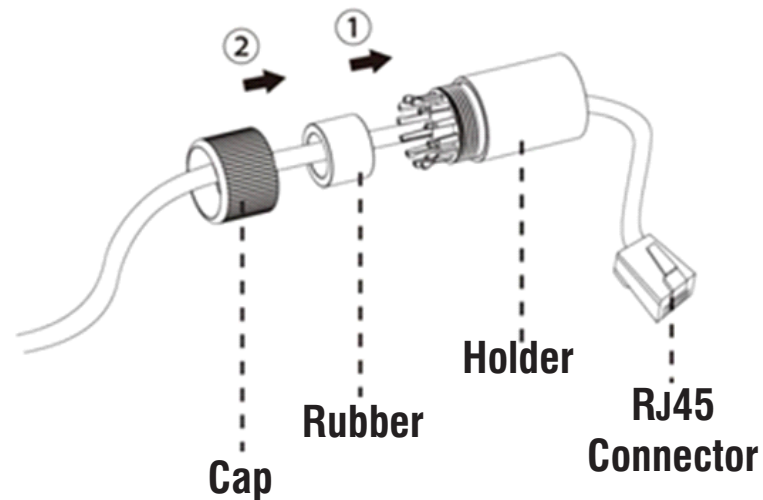


2. Affix the O-Ring on the Network Port Connector as shown below.

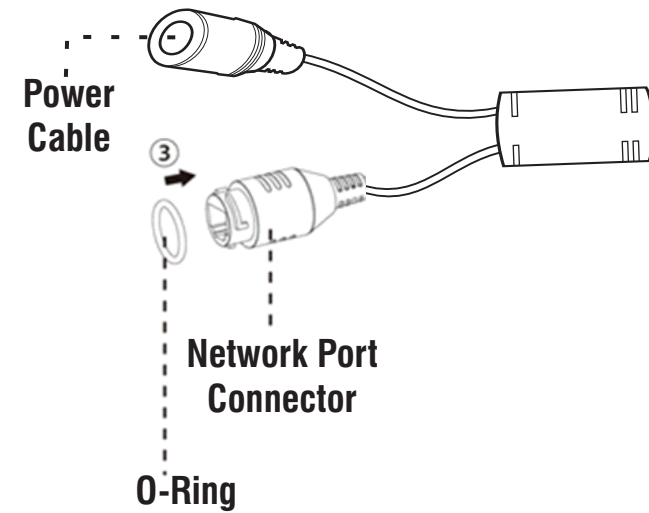

3. Insert RJ45 Connector into the Network Port Connector.

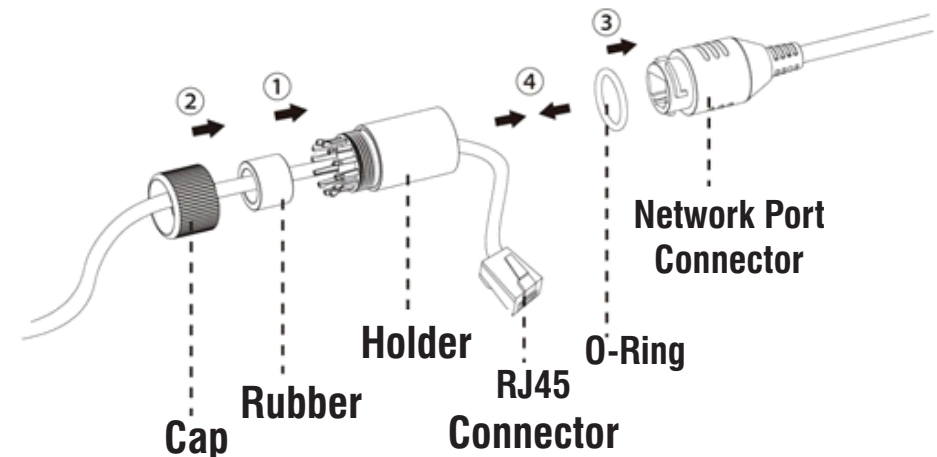


4. The Ingress Protection Accessory is connected with the camera.

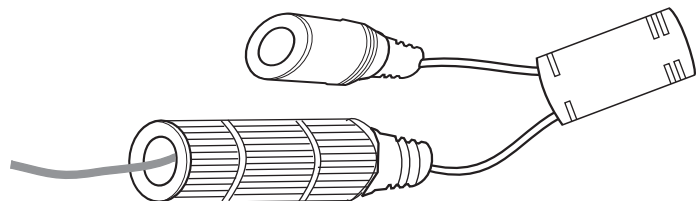


#### Step 4: Installing Mounting Template

- Stick the Mounting Template on the desired installation surface.
- Drill three holes through the markings of the Mounting Template on Wall or Ceiling.
- Insert the screw grips in the holes you drilled.

#### Ceiling Mounting: Figure 2

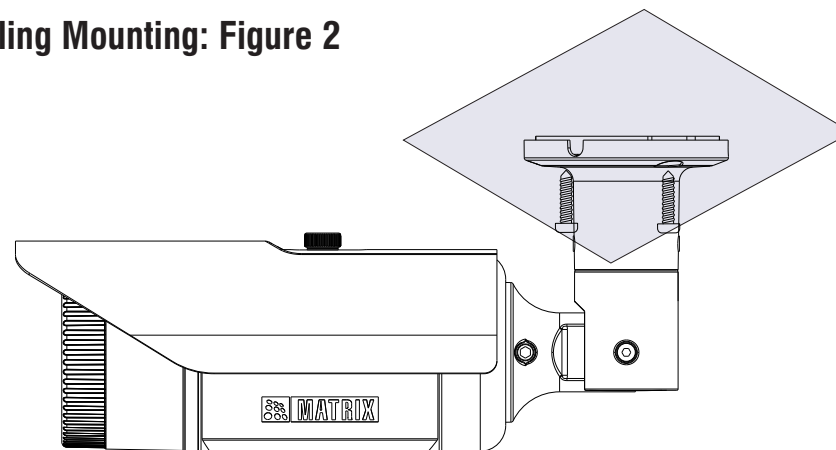

#### Wall Mounting: Figure 3

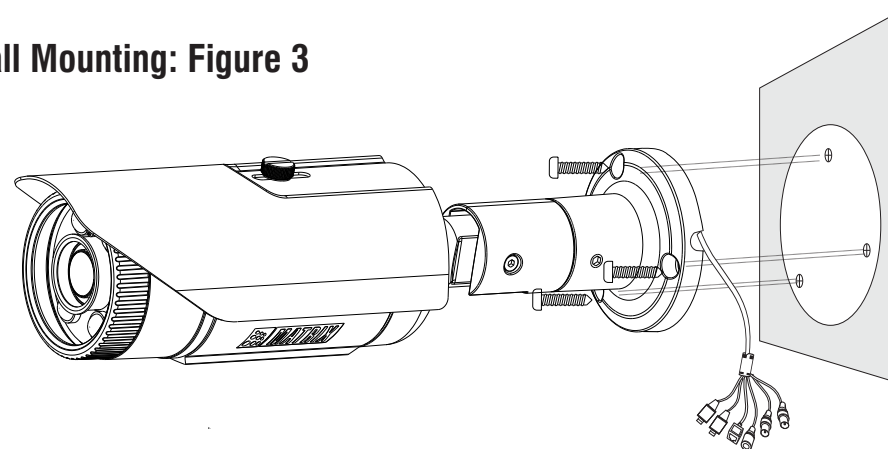


### Step 5: Mounting the Camera

- To avoid cable damage, take the Power, Ethernet, Audio IN, Audio OUT, Alarm IN, Alarm OUT cables of the camera through the cable guide on the base plate. see **Figure3**
- Align the screw holes on the base plate with those you drilled on the installation surface.
- If the cabling is running through the interior of the wall or ceiling behind the installation surface then, drill the hole (20mm approx) on the center of the mounting template through the false ceiling. Before you mount the base plate, pull the cables of the camera through the hole drilled on the installation surface. see **Figure2**
- Secure the base plate of the camera on the installation surface with the supplied screws.


### Step 6: Adjusting the Camera Angle

- Use the Allen Key supplied to you to loosen the socket screws on the pivot joint between the base plate and the camera body.
- Tilt the camera body to achieve the desired angle. You can turn the camera upto 360 degrees.
- Hold it at the desired angle and tighten the socket screw with the Allen key.

**Figure 4**

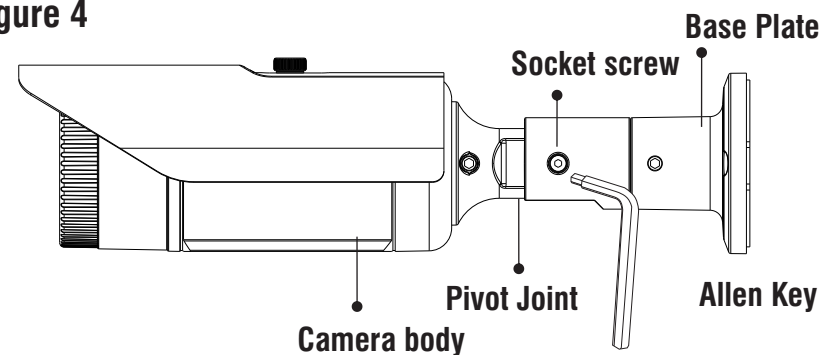

**Figure 5**

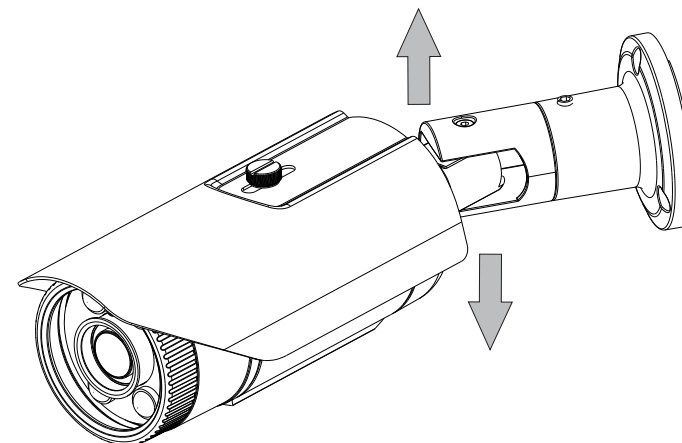

**LED:** CLASS1 (Category RS1)



Never look at the transmit laser while the power is on. Never look directly at the fiber ports and the fiber cable ends when they are powered on.

Use of controls or adjustment to the performance or procedure other than those specified herein may result in hazardous laser emission.



## Step 7: Connecting Cables

- Connect the **Ethernet** cable to LAN port and **Power** cable to the 12V DC power supply.


In Premium variants, connect the Audio I/O cables if required.


1. You can connect the **Audio Input** device such as Mike to the Audio input cable of the camera. The audio when enabled will be recorded with the video and will be available at the monitoring location.


2. You may connect the **Audio Output** device such as earphone or speaker to the Audio Output cable of the camera. This will generate audio received from the network.

3. To detect alarm events you can connect a sensor device to the **Alarm IN** cable of the camera.

4. To get alerts on alarm you can connect the alarm sounding device such as hooter or siren to the **Alarm OUT** cable of the camera.

 If devices such as Mike and Speaker can be connected to Audio IN and Audio OUT, you may need to connect an external power source if their power requirements are not fulfilled with the camera adapter.

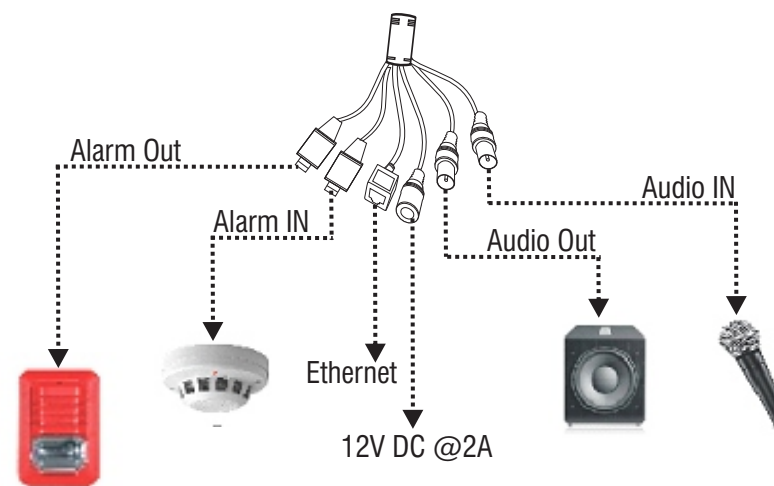

 If devices such as Sensor and small Buzzers can be connected to Alarm IN and Alarm OUT, you may need to connect an external power source if their power requirements are not fulfilled with the camera adapter.

## Power over Ethernet (PoE)

The IP camera is PoE- compliant, allowing transmission of power and data via a single Ethernet cable connected to PoE switch.


## Accessing Reset Pin and SD card slot

If you forget the IP address or login credentials of camera then the camera can be reset to factory default settings using the reset pin.

To access the Reset pin


1. Open the Sunshield by removing the sunshield screw.

**Figure 6**

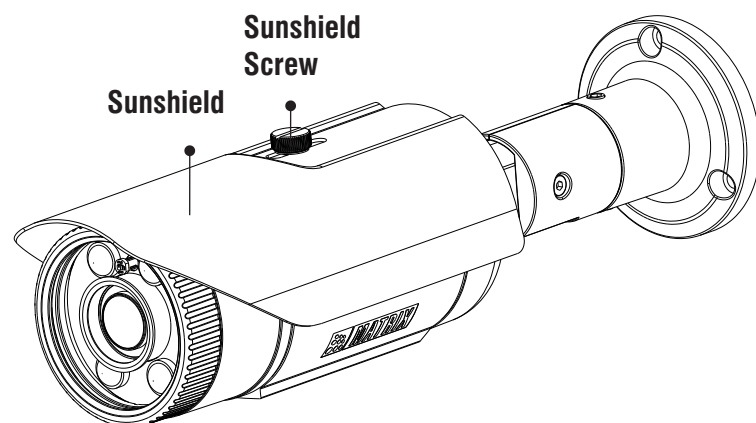


2. Open the front cover by rotating it in the anti-clockwise direction.

**Figure 7**

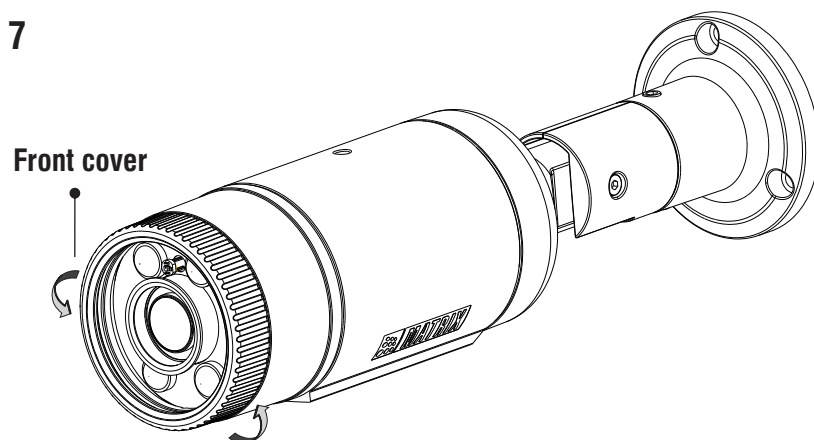

3. Press the Reset switch for minimum 5 sec and release the switch to reset the camera to default settings.

**Figure 8**

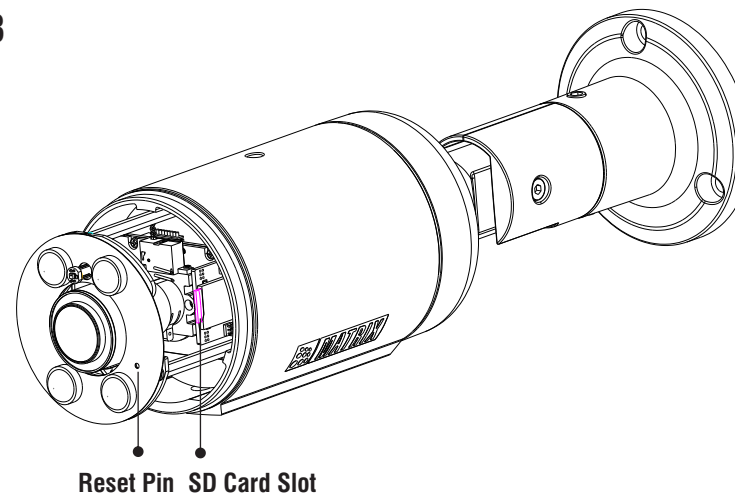


4. You can insert the SD card in the slot to store your camera recordings.

**!** After Reset or SD card insertion, you may need to set the camera focus and camera angle.


For greater IR vision during the night mode in 2.8mm focal length bullet cameras, It is recommended to put the sunshield at its minimum position from the camera lens as shown in below figure.

**Figure 9**

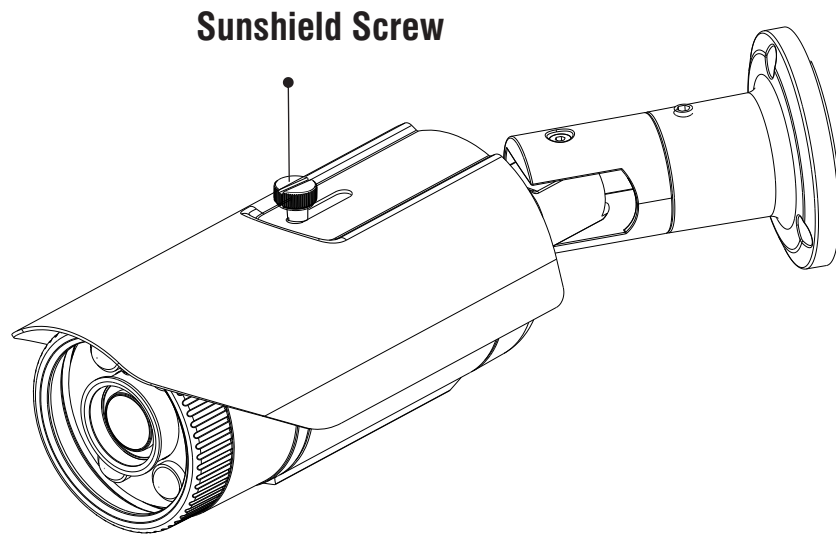

## Adjusting Focus and Zoom in Varifocal Cameras

**Figure 10**

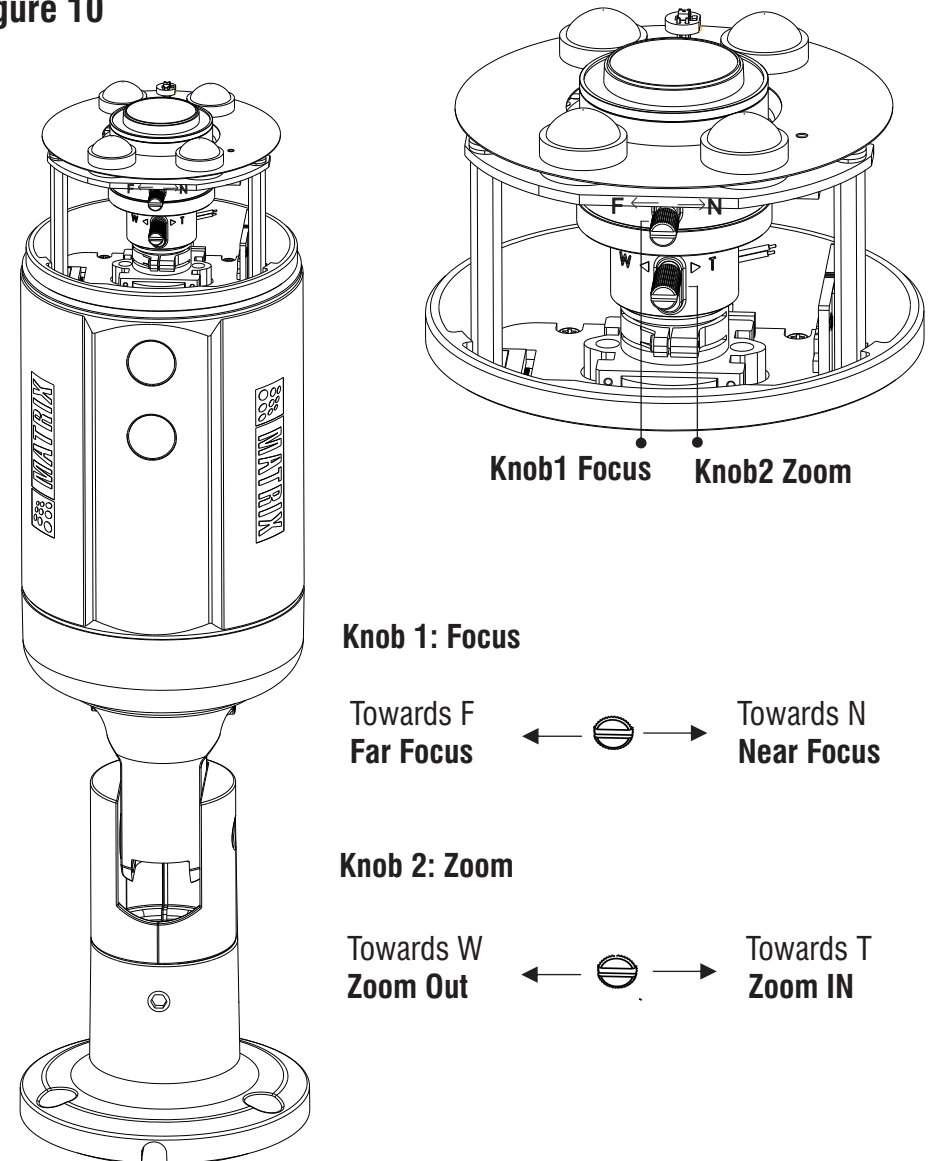


## Network Configuration

To view and configure the camera via LAN (Local Area Network), you need to connect the network camera in the same subnet with your PC. Then install the software to configure the IP address.

### Steps to get the IP address:

- Once the camera is connected to the network, it will automatically be assigned a dynamic IP address by the DHCP server. You can view the assigned IP address through any IP scanner utility.
- If DHCP server is unavailable or is not able to provide an IP address then **192.168.1.126** will be set as default IP address.
- You can change the IP address and subnet mask of Camera from the Basic Settings page of camera.

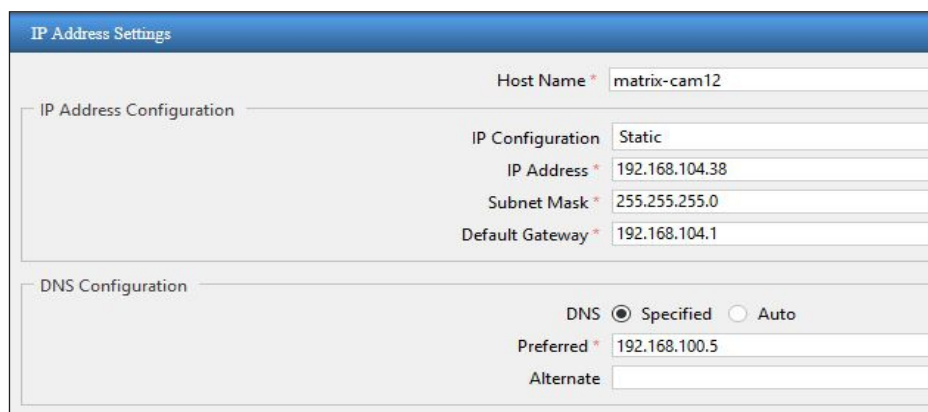

The screenshot shows the 'IP Address Settings' web interface. It has a blue header bar with the title 'IP Address Settings'. Below the header, there are two main sections: 'IP Address Configuration' and 'DNS Configuration'. In the 'IP Address Configuration' section, there is a 'Host Name' field with the value 'matrix-cam12'. Below it, there is a table for 'IP Configuration' with the following values: 'Static' for IP Configuration, '192.168.104.38' for IP Address, '255.255.255.0' for Subnet Mask, and '192.168.104.1' for Default Gateway. In the 'DNS Configuration' section, there is a 'DNS' section with 'Specified' selected and 'Auto' unselected. Below it, there is a 'Preferred' field with the value '192.168.100.5' and an 'Alternate' field which is empty.

## Accessing via Web Browser

The IP cameras are supported by Microsoft Windows Operating System.



- ! In Internet Explorer you can access the camera with Matrix ActiveX plugin. In other browsers you need to install Quicktime or VLC plugin.

### Steps:


- Run the web browser as administrator.
- In the browser address bar, type the IP address of the camera e.g., 192.168.1.126 and press the Enter key to open the login interface.



- Enter the User Name and Password.
- By default, you can login with User Name as **admin**, **operator** or **viewer** with the password as **admin**, **operator** and **viewer** respectively.
- Click on Login.

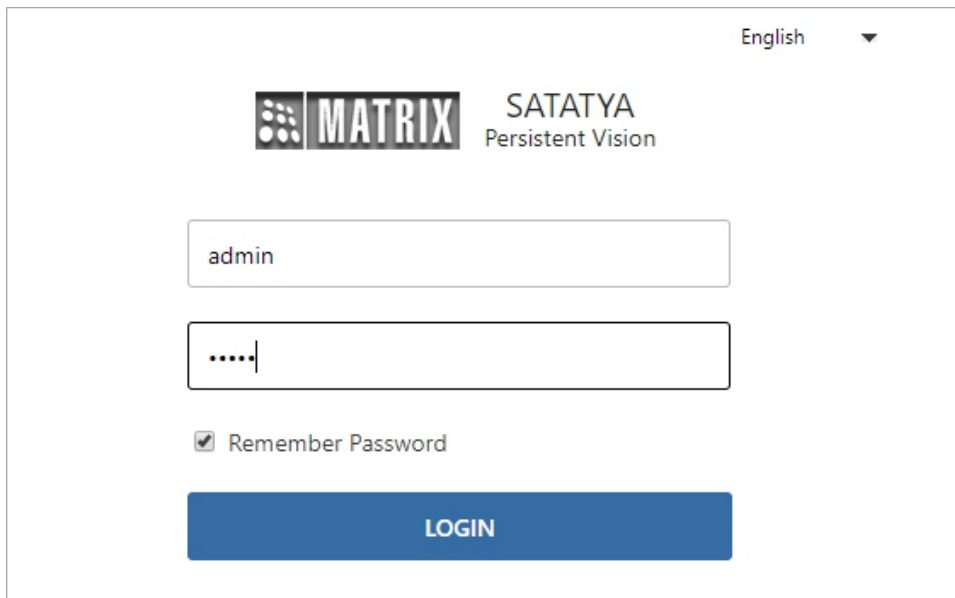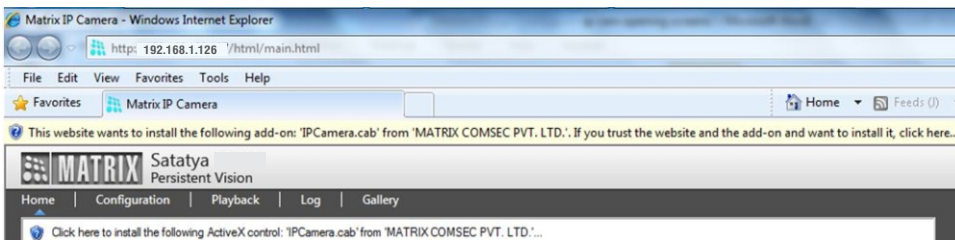- The browser will ask you to install ActiveX control.
- Click on Run Add-on to install the plugin.

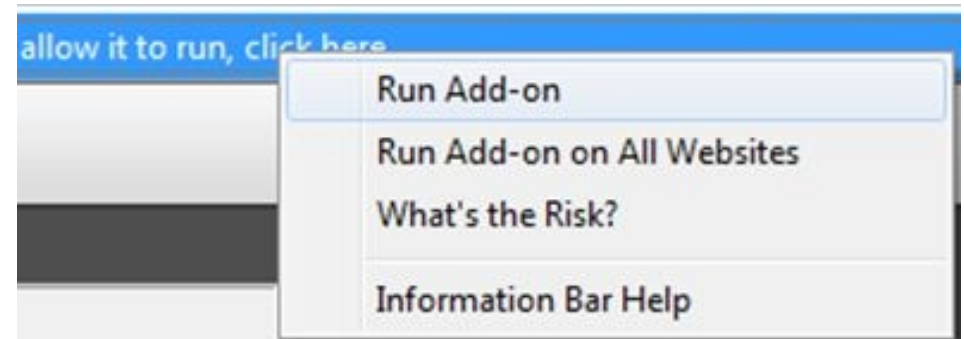


- The ActiveX control will get installed on your PC.
- Now you can **Run** the plugin.



- Install the Camera software by clicking on **Install**.



- The home page of the camera will open and the live view will be displayed.

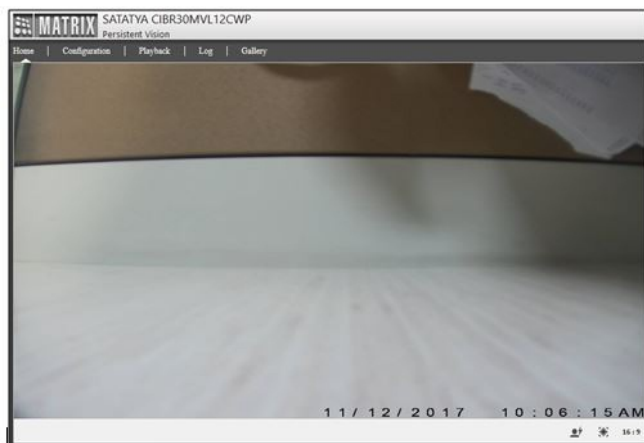

- The camera configuration can be set from Configuration tab.

## Technical Specification

| Specification     | Standard  | Premium |
|-------------------|---|---------|
| Power Supply      |   |         |
| User Adapter      | 12V DC  |         |
| PoE               | Yes (802.3af, Class 3)  |         |
| Power Consumption | 12VDC 0.7A; Max: 8.5W<br>PoE (36V to 57V)(0.3A to 0.2A); Max: 10W |         |
| Connectors        |   |         |
| Ethernet          | Yes   |         |
| WiFi              | No  |         |
| Audio IN          | No  | Yes     |
| Audio Out         | No  | Yes     |
| Alarm IN          | No  | Yes     |
| Alarm Out         | No  | Yes     |
| Casting           |   |         |
| Material          | Aluminum  |         |
| Colour            | Ivory   |         |
| Physical          |   |         |
| Dimensions        | 320mm x 85mm  |         |
| Weight            | 950 gm  |         |

\* Use BIS, CE, ROHS and FCC approved Adapters.



## Technical Specification

| Specification   | Standard  | Premium   |
|-----------------|---|---|
| Storage         |   |   |
| NAS             | Yes   |   |
| SD Card         | Yes   |   |
| Software        |   |   |
| Auto Focus      | No  | Yes (Only for Motorized Varifocal)  |
| Auto Zoom       | No  | Yes (Only for Motorized Varifocal)  |
| IVA Events      | Motion, Temper Detection, Trip Wire, Intrusion, Detection | Motion, Temper, Trip Wire, Intrusion, Loitering, Audio Exception Detection, Object Counting Missing/Suspicious Object |
| ONVIF Profile   | S   | S,G   |
| Environmental   |   |   |
| Operating Temp. | -20 to +60 °C   |   |
| Humidity        | 5 to 95% RH   |   |

\* Missing Object, Suspicious Object, Object Counting and Loitering Detection events will work only in CIBRxxMVL12CWP variants of Matrix IP Camera.

## FCC Compliance

### 47CFR FCC PART 15B

#### Information to the user

(a) For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual:

NOTE: This equipment has been tested and found to comply with the limits of Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



## Compliance

|  |  |
|--|--|
| EMC Directive                                | 2014/30/EU                                 |
| Low Voltage Directive                        | 2014/35/EU                                 |
| RoHS Recast (RoHS 2)                         | 2011/65/EU (As per standard EN 50581:2012) |
| <b>Mechanical</b>                            |  |
| Vibration (sinusoidal)                       | IEC 60068-2-6 :2007                        |
| Protection against Mechanical impact (IK 10) | IEC 62262:2002                             |
| Degree of Protection (Ingress Protection)    | IS/IEC 60529:2001                          |

## Disposal of Product after End-Of-Life

### WEEE Directive 2002/96/EC

The product referred is covered by the waste Electrical and Electronic Equipment (WEEE) directive and must be disposed of in a responsible manner.

At the end of product life cycle; batteries, soldered boards, metal components and plastic components must be disposed through recyclers.

If you are unable to dispose-off the products or unable to locate e-waste recyclers, you may return the products to Matrix Return Material Authorization (RMA) department.



**SECURITY SOLUTIONS**

**MATRIX COMSEC**

**Head Office**

394-GIDC, Makarpura, Vadodara - 390010, India

Ph: (+91)1800-258-7747

Email: Tech.Support@MatrixComSec.com

[www.matrixvideosurveillance.com](http://www.matrixvideosurveillance.com)